
**WayteQ GPS Navigation
X950BT
User Manual
English Version 1.0**

Thanks for using WAYTEQ products !

- WAYTEQ reserves the rights of final interpretation of the manual.
- The product is subject to change without any further notice. Please accept our apology for your inconvenience.
- Please back up your information in the GPS navigator. WAYTEQ assumes no responsibility for any loss caused by material loss.
- The manual might contain a few mistakes though it has been checked. If mistakes are found, please contact the WAYTEQ customer service center.
- Please read carefully the instructions in this manual and use only accessories of WAYTEQ to avoid unpredicted damage. Failure to follow the instructions will invalidate warranty and might endanger personnel safety, for which WAYTEQ assumes no responsibility.
- Data of navigation electronic maps might be inconsistent with actual traffic signals due to transportation development. Please follow traffic regulations and signs and drive according to road situation.
- Operating the GPS navigator device while driving might cause serious accidents. Please shorten your time in viewing the navigator and use the voice prompt function. While driving, try to shorten your time in operating the navigator, for example, inputting addresses, changing settings or using other functions. WAYTEQ assumes no responsibility for accidents and loss due to improper use.
- For safe driving, please pay attention to road and weather conditions as well.
- The pictures in the manual are subject to the material object.

Welcome!

Thanks for using the WAYTEQ GPS featured with navigation as the major function as well as other amusement functions like audio play, video play, photo browsing, e-book reading, and games, etc.

- ✓ SiRF Atlas-V, dual-core CPU with high performance and low power consumption
- ✓ Friendly user interfaces for simple operation
- ✓ Power management for longer and more stable operation
- ✓ Data transmission with computers via Mini USB
- ✓ Quality reception for accurate positioning and satisfactory navigation service
- ✓ Leisure partner with audio/video/amusement functions

You may use the GPS navigator anytime anywhere, for example while driving, walking or cycling. Its navigation and amusement functions will enrich your life and work!

To fully exert the functions of WAYTEQ GPS and to understand the operation details, please read the manual carefully.

This manual is applicable only to the WAYTEQ GPS.

Basic Introduction

1. Overview



- A. Charging Indication
- B. Speaker
- C. Power
- D. 3.5mm Earphone Socket
- E. Memory Card Slot
- F. Mini USB
- G. Stylus Pen Slot
- H. Reset
- I. MIC
- J. Light Sensor

2. Charging by AC Adapter

Caution: The charging indicator light is red during charging. Do not unplug the charge until the battery is fully charged and the indicator light turns green. Please charge the GPS navigator when the battery is low or used up in succeeding use.

3. Charging by Car Charger

Caution: To protect your device against suddenness, please connect the car charger only after the car engine has been started.

4. Battery

Caution: The GPS navigator adopts removable Li-polymer battery. To avoid battery rupture, explosion, release of hazardous substance or burn, do not unpack, pierce, strike on or discard the battery in fire or water.

The navigator has a working temperature of 0~50°C and storage temperature -10~60°C. Do not expose the device in excessive heat or hot areas, for example in the car under strong sunlight. To avoid damaging the device, keep it away from direct sunlight.

Follow local regulations while disposing the battery.

5. Install the Car Cradle and Bracket

Caution: Do not place the GPS navigator in positions obstructing the driver's vision, for example at the steering wheel, pedal or gear lever. Do not place it without fixing it, or in the place of air bag or the area after the air bag is inflated.

While using the mounting kit, follow local regulations. WAYTEQ will have no responsibility for any penalty or damage resulting from traffic violation.

6. Using T-Flash Card

Caution: Do not take out the T-Flash card while an navigation program is being run or a media file is being played.

To avoid drop or crash of the T-Flash card, do not exert heavy pressure on it or bend it.

Mind the direction while inserting the T-Flash card to avoid damaging the slot or the card.

7. Restarting the system

When the system does not response, press the reset key on the right side of the GPS navigator to restart the system.

Caution: Restarting the system by pressing the reset key will result in loss of unsaved data. Please backup your data regularly.

Main Functions Introduction

 
1. Starting Up and Power Off

Long press the "Power" button to power the equipment on and you can see the main interface as below :



Tap the " 00:09 " to Set the system date and time.

Long press the "Power" button again to enter into the below interface :

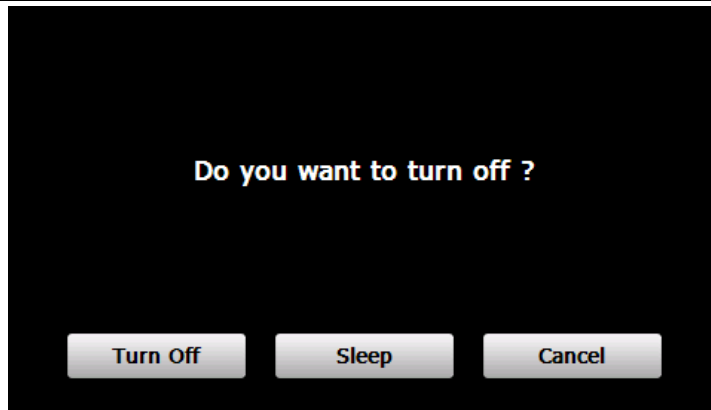

Tap the **“Turn off”** button to turn the unit off.

Tap the **“Sleep”** button to enter a suspend state and the system stops operation.


Tap the **“Cancel”** button to turn back to the screen.

2. GPS Navigation

Double tap the “GPS” icon to start navigation program.

Caution: Please refer to navigation software instructions for details.


3. Music


Tap the icon "  " to enter into the following interface :





- | | |
|------------------------------|-----------------|
| A. Return to the Main menu | F. Pause / Play |
| B. Volume control | G. Previous |
| C. Select desired music file | H. Speed Bar |
| D. Stop | I. Play modes |
| E. Next | J. Equalizer |

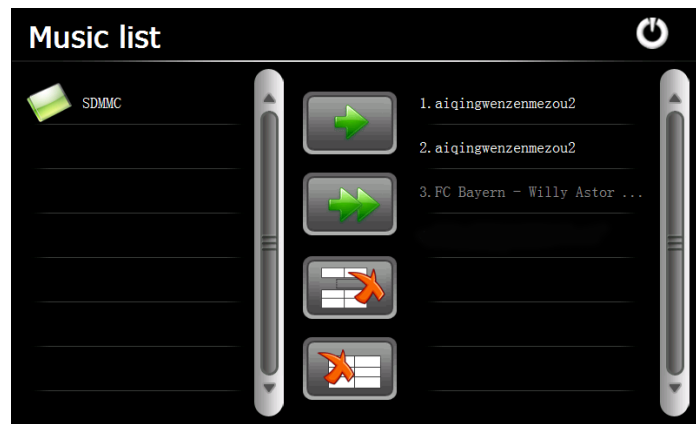 Double tap icon "  " to choose music file .



Tap the icon "  " for single selection , tap the icon "  " to select all , tap the icon "  " for single delete , tap the icon "  " to delete all.

4. Photo



Tap the "  " icon, then tap the icon "  " to select photo files , double tap the photo file to see the following interface .



- A. Return to the Main menu
- B. Select photo file
- C. Slide mode
- D. Rotate
- E. Zoom in
- F. Zoom out
- G. Next
- H. Previous

5. Video



Tap the icon "  " icon, then tap the "  " icon to choose video files , and double tap the file and enter into following interface .



- A. Return to the Main menu
- B. Volume
- C. Select video file
- D. Stop
- E. Next
- F. Pause/play
- G. Previous
- H. Speed bar

Tips:

Double tap the screen, it will display in full screen, double tap the screen again, it will return to original playing size.

6. Flash





Tap the icon "  " and enter into the following interface .

 


- A. Volume
- B. Return to the Main menu
- C. Select flash file
- D. Stop
- E. Play / Pause
- F. Speed Bar

7. Ebook



Tap the "  " icon , then tap the "  " icon to choose Ebook files , double tap the file and enter into the following interface .

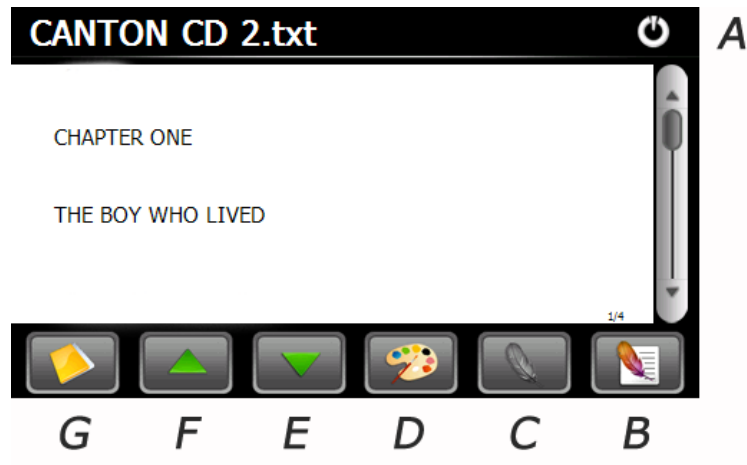

- A. Return to the Main menu
- B. Bookmark list
- C. Bookmark
- D. Setting to set theme & font
- E. Next page
- F. Previous page
- G. Select EBook files

8. Setting



 
Tap the "  " icon and enter into the following interface .



1. Volume



Tap the icon " " on the menu and enter into the following interface .

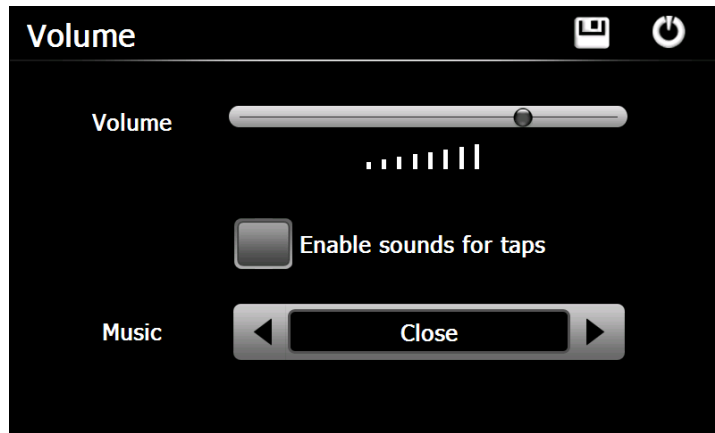

Choose " Music " files to be background sound when unit is power on .

 


Tips : after make any changes of setting , tap " " to save the change .

2. Backlight




Tap the " " icon and enter into the following interface to make the backlight settings.

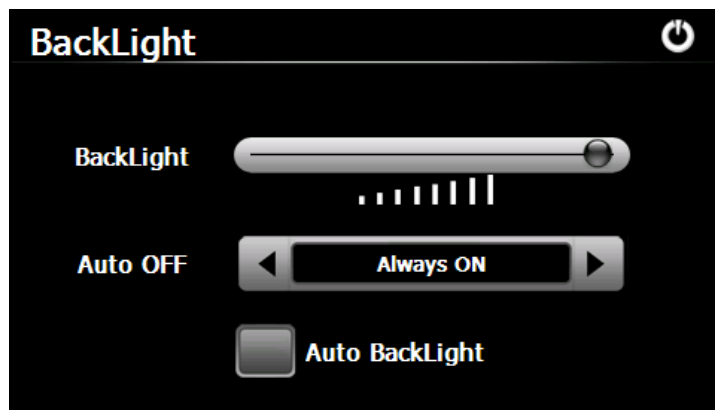

3. Language



 
Tap the " " icon and choose the language .

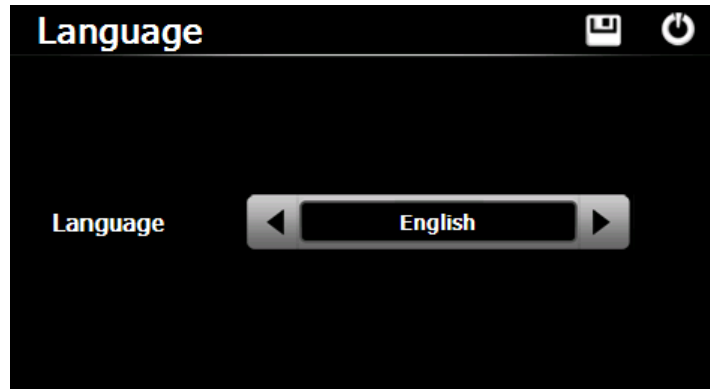

4. Date and Time



 
Tap the icon " " and enter into the following interface to set date , time and time zone .

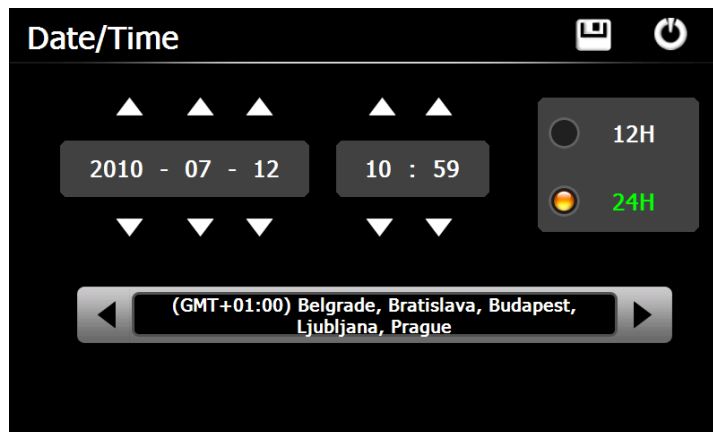

5. Calibration



 
Tap the " " icon and enter into the following interface .

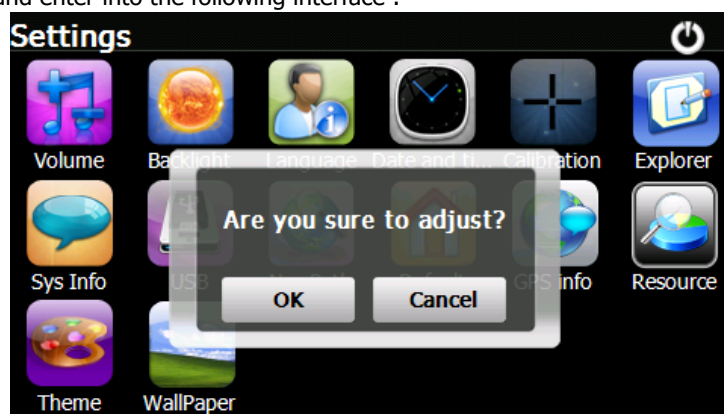

Tap the icon "OK" to adjust the touch screen.

6. Explorer




Tap  icon, there will be one prompt as below to ask if go into WINCE mode, choose "OK" to enter and "Cancel" to exit.



7. Sys Info




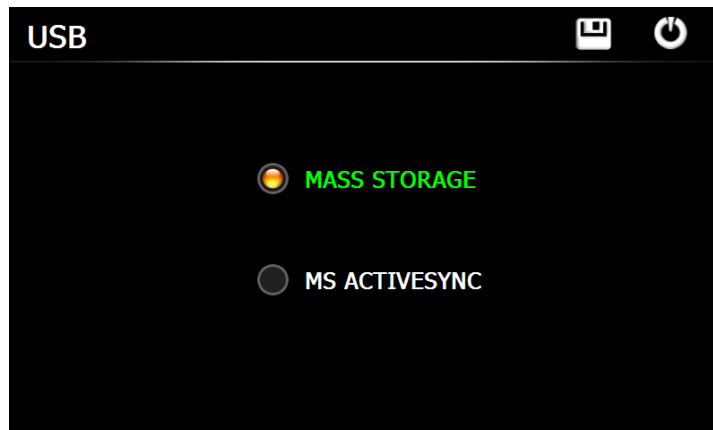 
Tap the "" icon and the system information will be shown.



8. USB



Tap the icon "" to set the USB working mode .



9. Nav Path



Tap the " " icon and enter into the following display interface .

 


When you have several Navigation maps in the device, you can set up one of Navigation maps (navigation program files) by choosing the "Navigation" icon and selecting the Auto Run Navigation , next time when tapping the "GPS" icon in the main menu, the device will run the selected Navigation software automatically .

10. Default




Tap the " " icon and enter into the following interface . Tap the icon " OK " to load factory default setting .

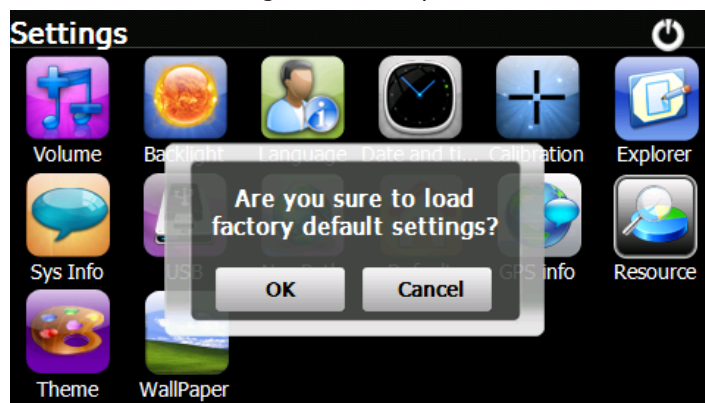

11. GPS Info



 Tap the " " icon and the unit will show the detail information of GPS satellites.

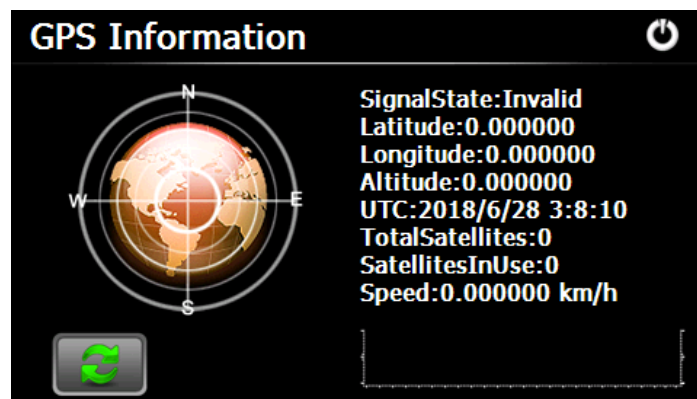


Tap " " and will have a prompt to ask if reset GPS receiver, tap "OK" to reset signal or tap "Cancel" to exit.

12. Resource



Tap " " icon to enter **System Resource** interface as shown below.

 You may check the capacity of the memory, SD card and flash, or tap **Clear Memory** to clear the memory .

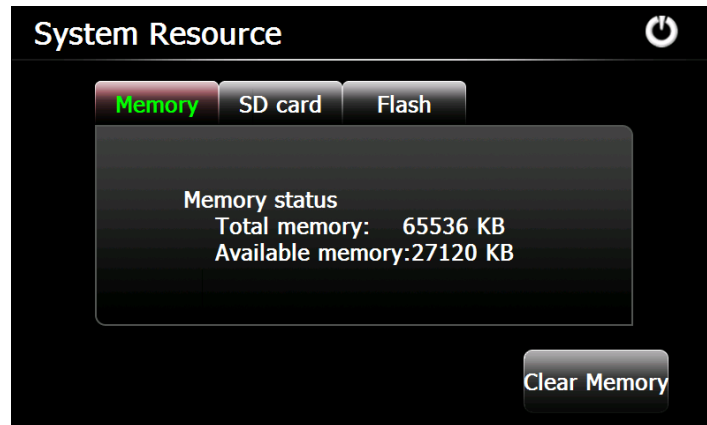

13. Theme




Tap " " icon to enter the **Theme** interface as below to set a style and theme for the system interfaces.

 


 
To rearrange icons at will, tap on an icon and stay until a four-way arrow appears at the upper left of it, drag the icon to a wanted place.

14. Wallpaper




Tap  icon to enter into the **Wallpaper** interface as below.

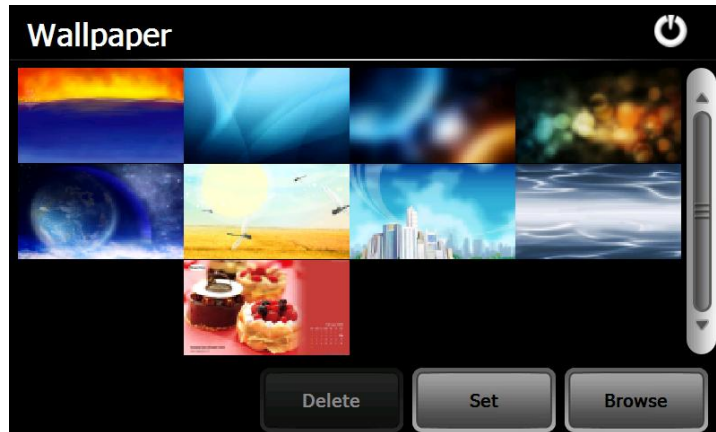


You may choose an pre-installed wallpaper, you may also set an external image as the wallpaper. The pre-installed wallpapers cannot be deleted, while the added images can be deleted. To delete images, select an added image from the "Wallpaper " interface and then tap .

15. FM Settings



 
Tap the " " icon and enter into the following display interface.

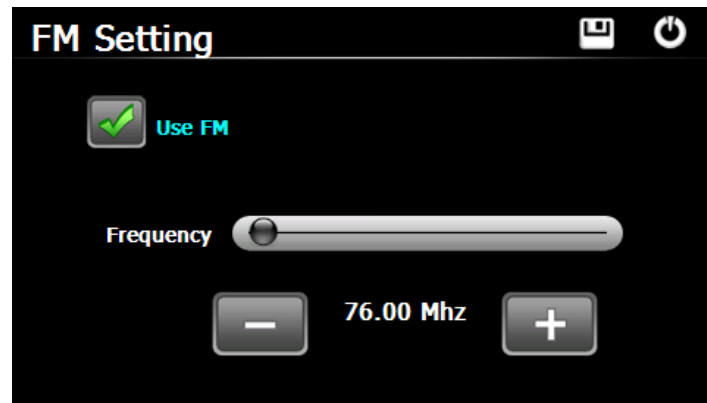

Tap "+"or "-" icon to increase or decrease the emissive frequency of FM.

9. Calculator



Tap " " icon to enter into the **Calculator** interface.


10. Unit



Tap " " icon to enter into the **Unit Converter** interface.

11. Gobang



Tap  icon to enter into the game interface. Tap "Start" to start.


12. Jaw Breaker



Tap  icon to enter into the game interface. Tap "New Game" to start.


13. Russia Block



Tap  icon to enter into the game interface. Tap "Start" to start.


14. Dui Dui Peng



Tap  icon to enter into the game interface. Tap "New Game" to start.


15. PaoPao



Tap  icon to enter into the game interface and start playing.


16. Snake



Tap  icon to enter into the game interface and start playing.

17. BoxMan



Tap  icon to enter into the game interface and start playing.


18. Lianliankan



Tap  icon to enter into the game interface. Tap "New Game" to start.


19. BreakOut



Tap  icon to enter into the game interface. Tap "Start" to start.

20. Othello



Tap  icon to enter into the game interface. Tap "Start" to start.

21. Bluetooth







Tap the " " icon in the main menu, enter into the Bluetooth interface. See the connection status on the bar at the bottom:

 



Tap the " Paired device list " icon and enter into the following interface :





Tap the  icon to connect to the chosen device , tap the  to disconnect , tap the  to delete pair info .


If paired mobile phone is not in the device list, please tap the  icon and enter into searching interface and pair with the mobile phone (mobile phone's Bluetooth should be switched on and being close to the PND). The interface will be like this:

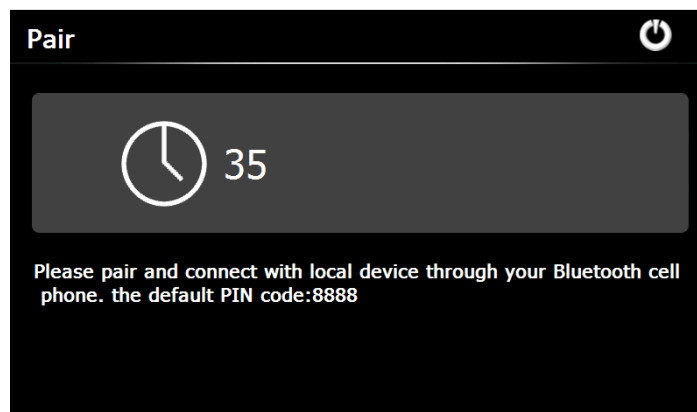

  Tap the  icon in the Bluetooth menu and enter into dial-up interface as below :

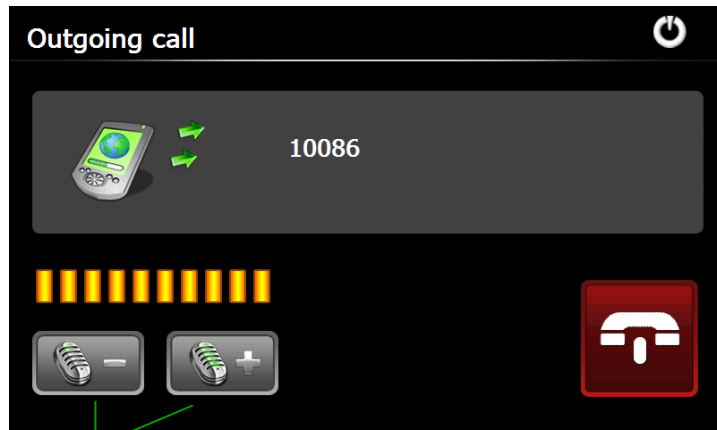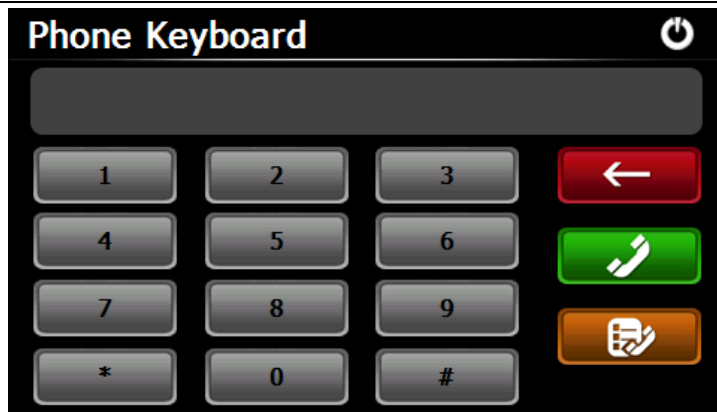


Adjust volume

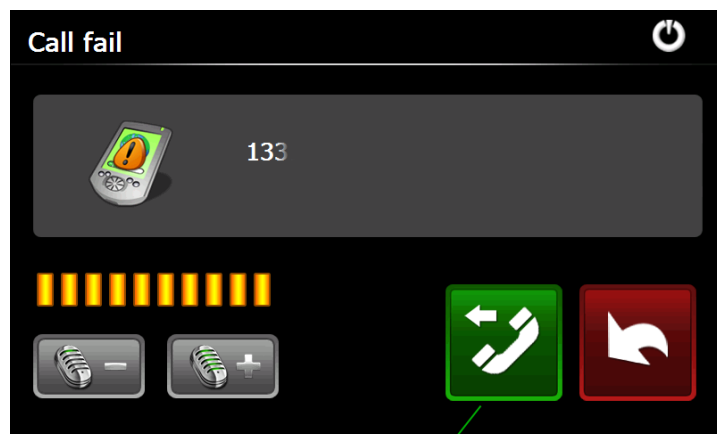 


Re-Dial last number

 In case of incoming call , the interface will look as below .

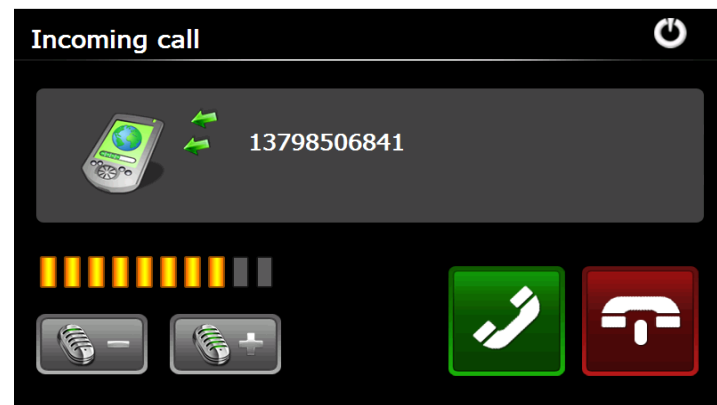



Receive the call , and interface will look as below :

 Open the small keypad

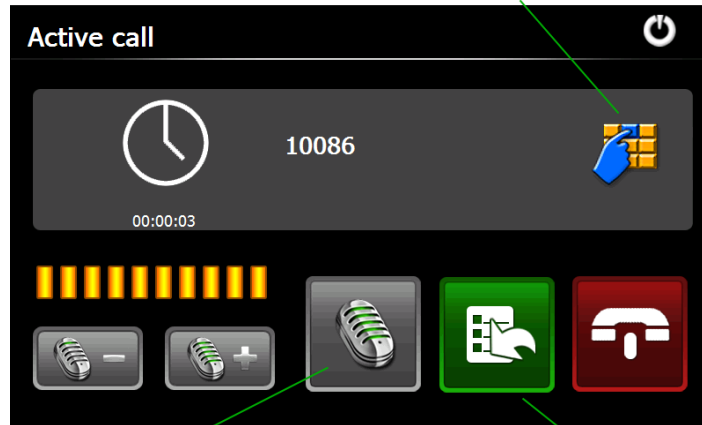

 
Turn on or off the MIC Switch call to phone

 Tap the  icon and enter into Bluetooth settings interface as below.

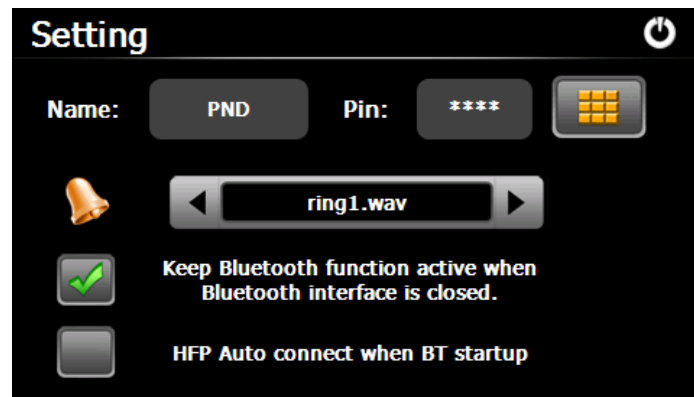

Name : display name of the device in the process of the Bluetooth transmission .

Pin: Tap the icon  and enter into the pin code interface .

This document is for guidance only and does not form part of any contract, and may be subject to change without notice.